

AUXXLIFT 1800

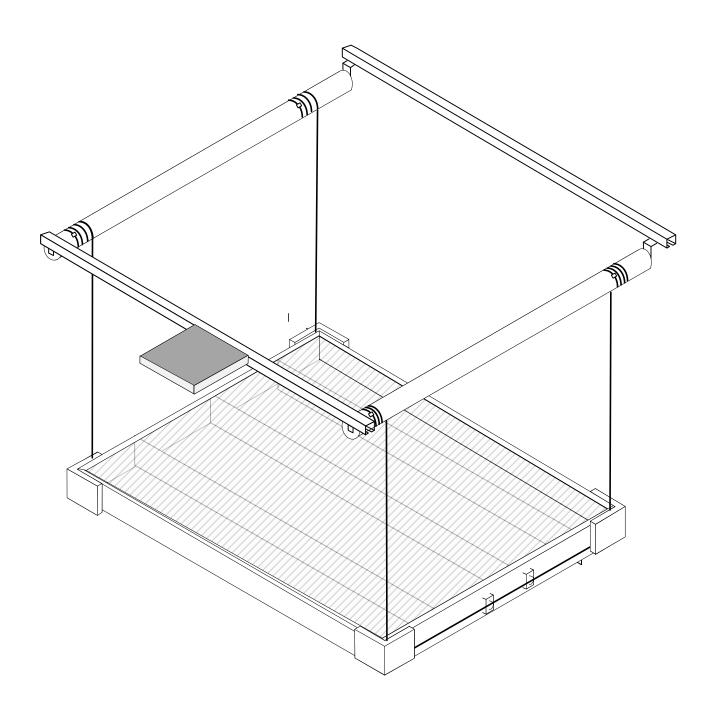



Before YOU start

- 1. Have you read through the instructions?
- 2. Do you have all the recommended tools?
- 3. Do you have somebody assisting you?
- 4. Have you allocated enough time?

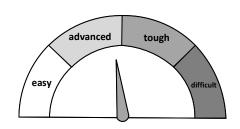


For a professional it takes about 3 hours to install.

What is most important is to follow the instructions

and read everything carefully before you start.

- 5. You need a good, stable ladder.
- 6. Don't use an impact driver.
- 7. Clean the area before you start.
- 8. Wear safety glasses!
- 9. Keep work area clear!

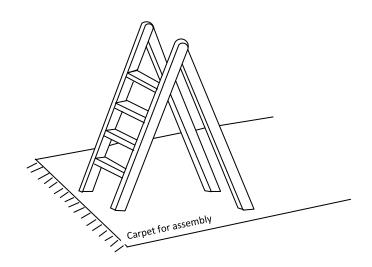

Check measurements during construction.

Make sure that nothing is in the way e.g. windows, doors etc.


- 10. Does your garage ceiling have or has had termites?
- 11. Are the joists strong and big enough? (2" x 4" at least)
- 12. Mounting to a concrete ceiling requires anchors!
- 13. Has your home been built according to valid standards and guidelines?
- 14. If you have doubts about the ceiling construction, please ask a specialist!


If you have any problems understanding the instructions or you feel uncomfortable handling the installation, please ask a handyman or work with a contractor. Call/write us if you need help or have concerns or questions.





www.auxx-lift.com


Help phone: PST 10 am -3 pm 1 805 862 8271

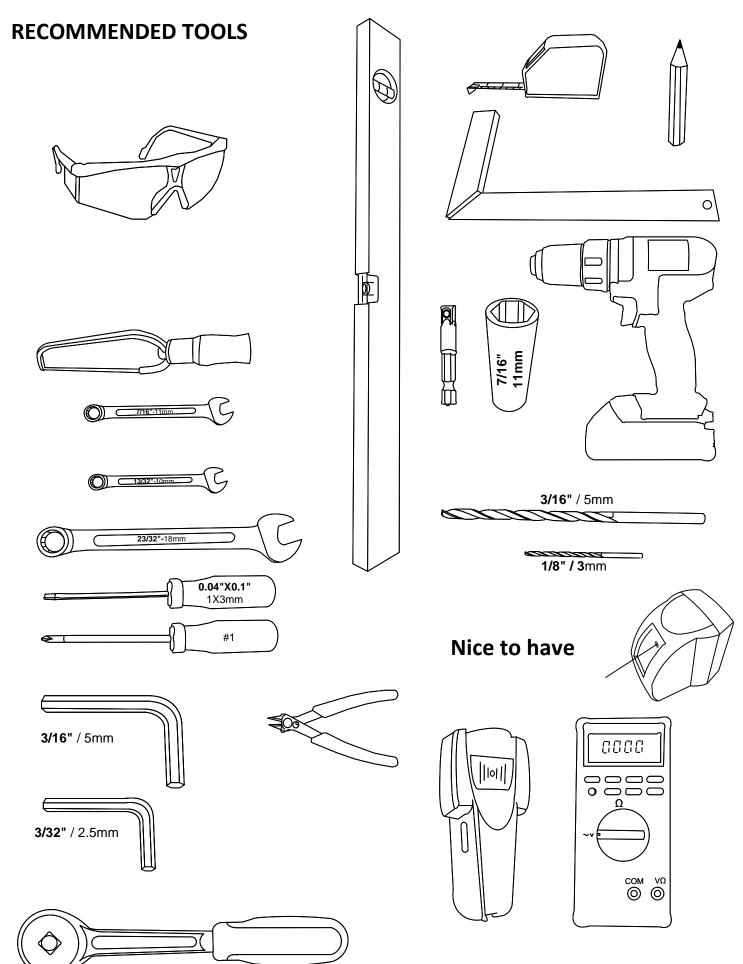

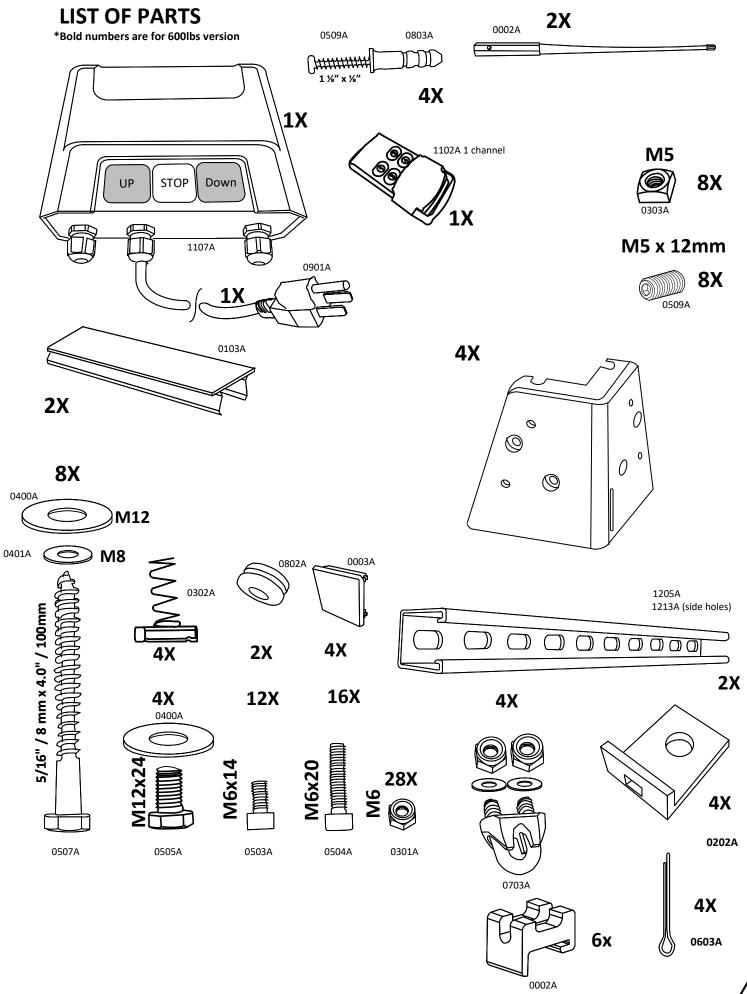

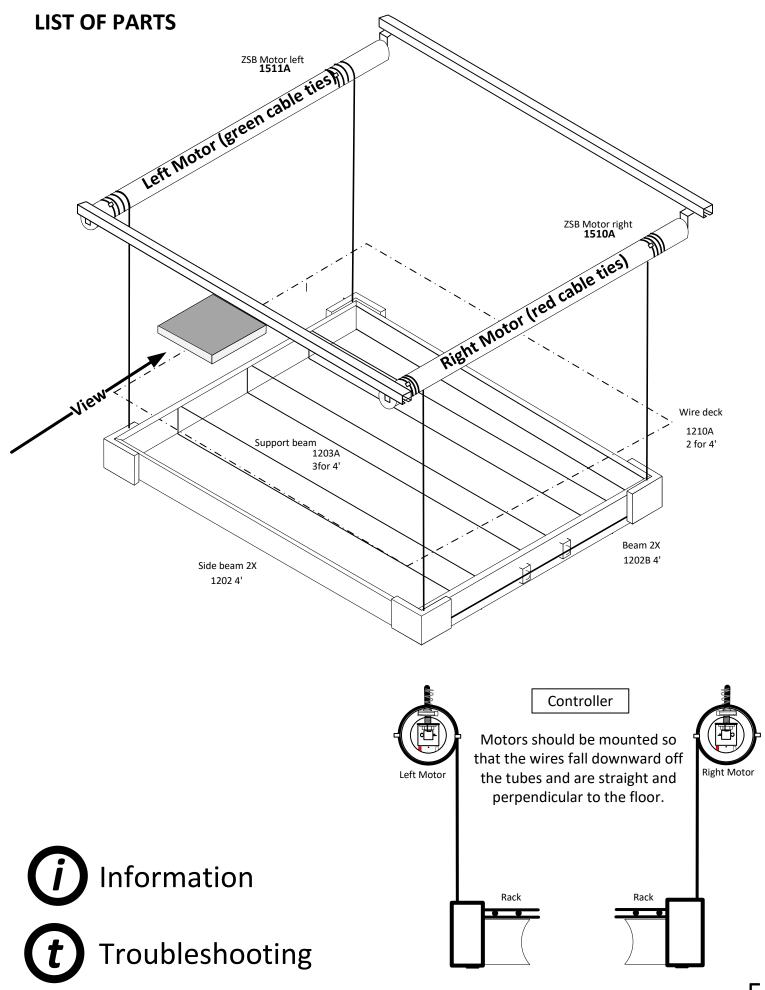


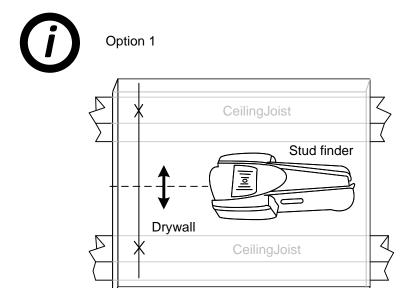


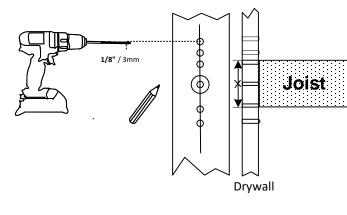


Option 2


Rail overhang on joists should be less than 12" / 30cm

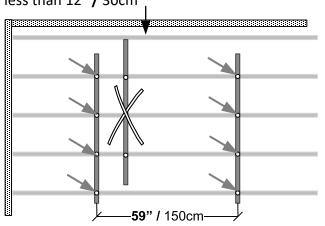

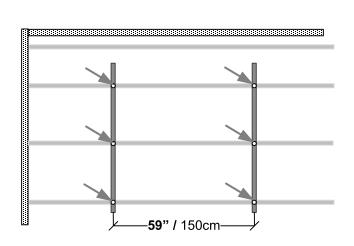


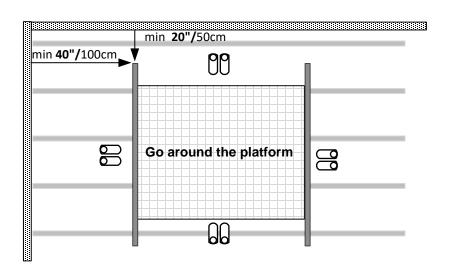


If you have doubts about the ceiling construction, please ask a specialist!

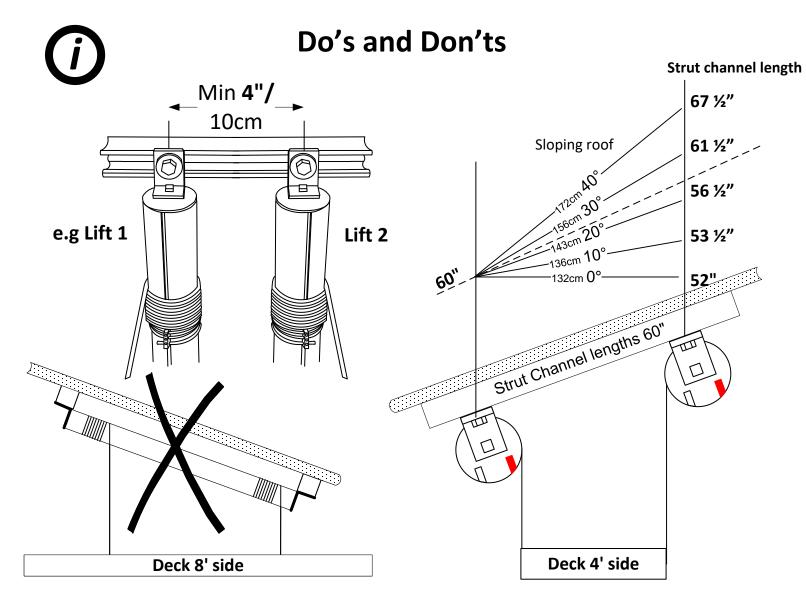



Maximum unwrapping of cable should be 3 wraps left on the tube

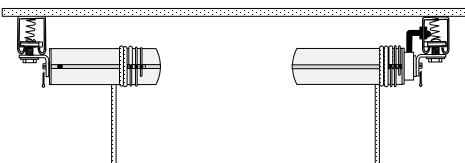



Gap between bracket and motor should not exceed 1/16"/ 1mm

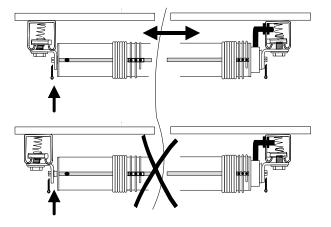

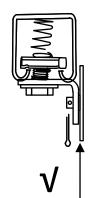


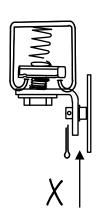

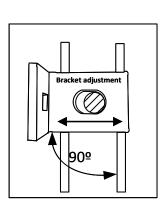

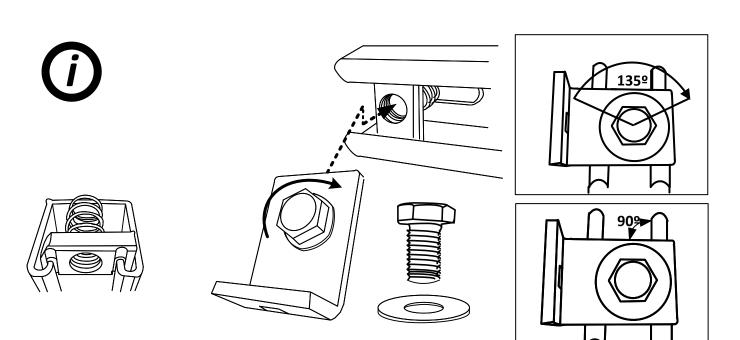



strut

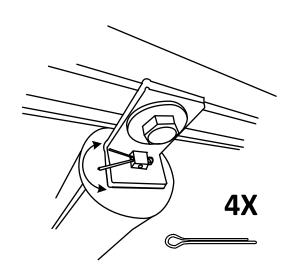



Tighten screw until the washer no longer rotates. Then tighten screw another 135° in the same direction.




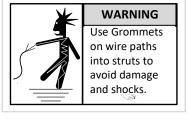


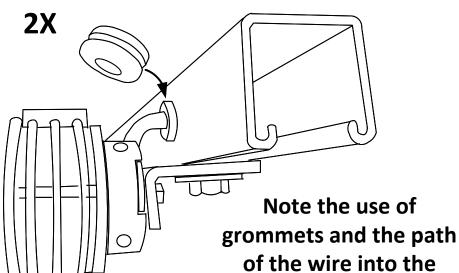


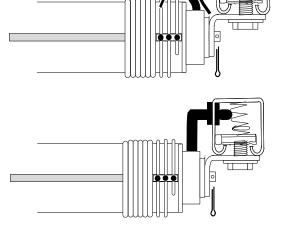

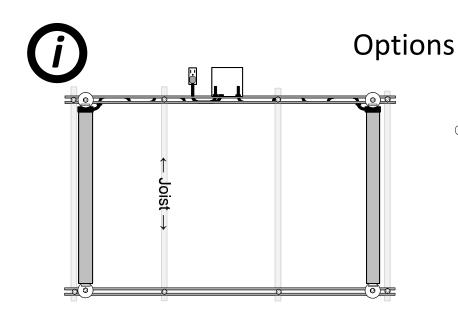

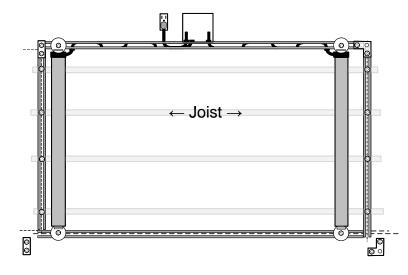

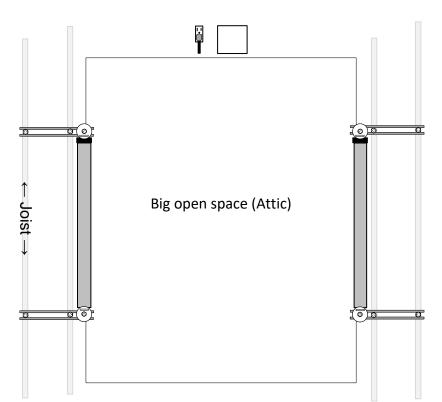

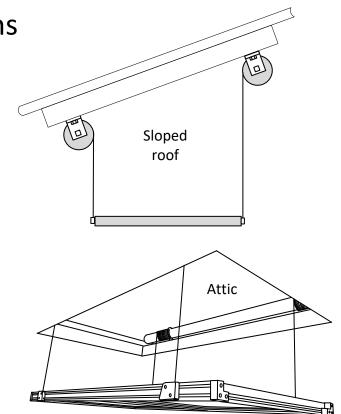

Projects in which the wire rope lose tension




Wire rope wound up



Maximum unwinding of the cable should leave 2 wraps




Even without tension the cable wraps should be side by side and there is no overlapping.

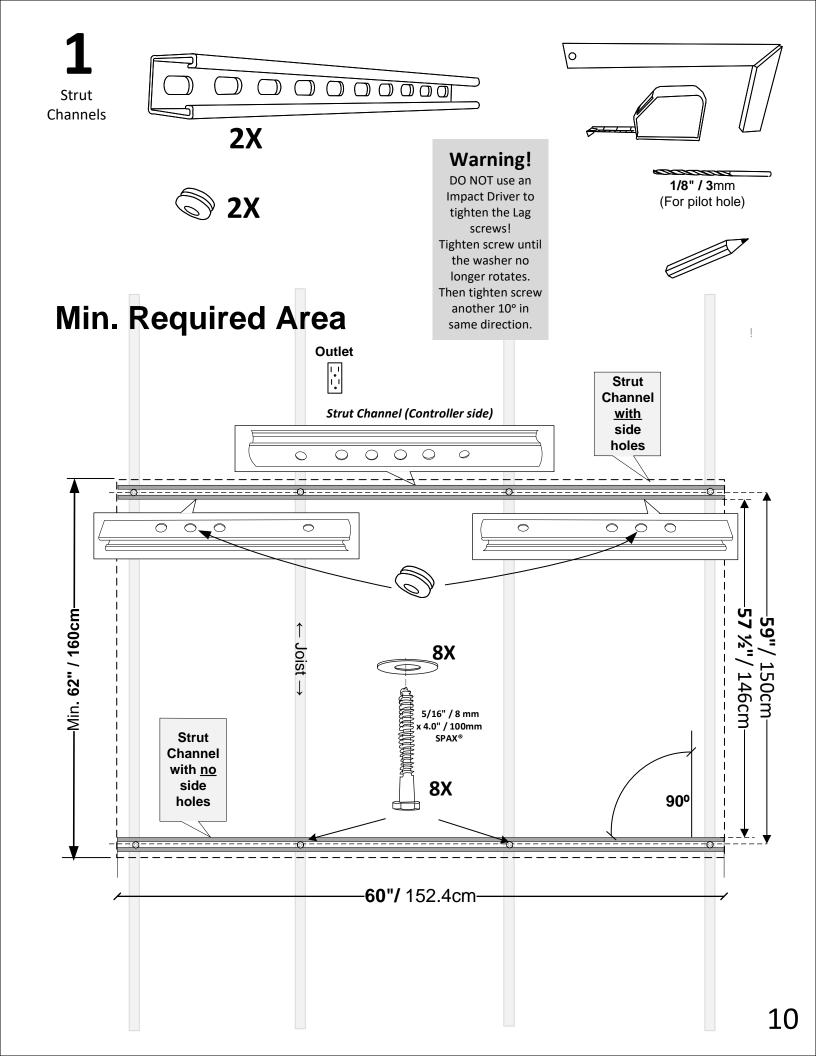

Channels


Joists rotated 90° from Standard: **Extra Strut Channels required (to** be purchased seperately)

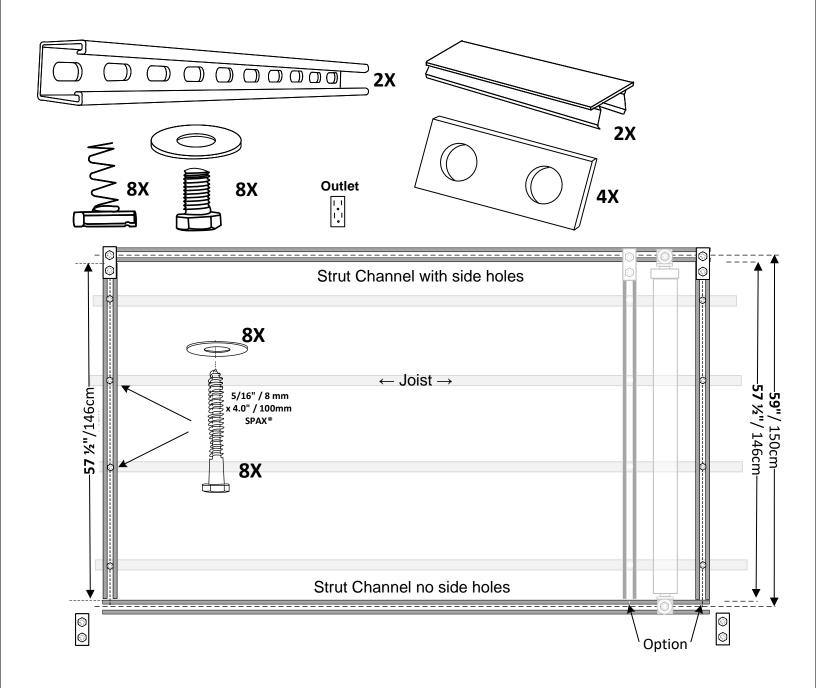



Extra material for this configuration is not included. You will find the below materials at any big-box hardware store or order it from us (contact us).


1x Strut Channel 10' 8x Strut Spring Nuts ½" 8x Strut Screws Hex-Head Bolt Model # ZE142121516EG10 **4x Strut Brackets**

Model # ZA12HS10EG Model # ZA1001/2EG-10 Model # ZAB206EG-10

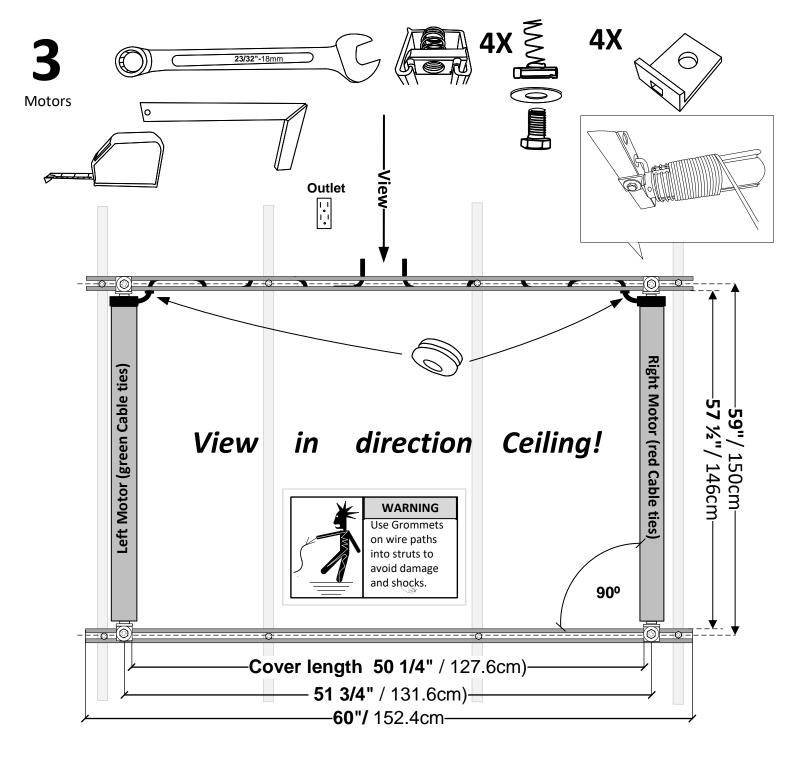


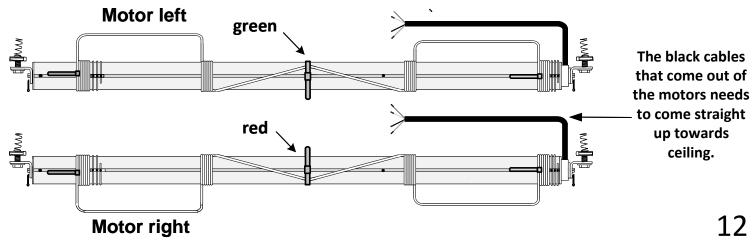

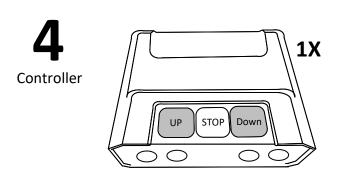

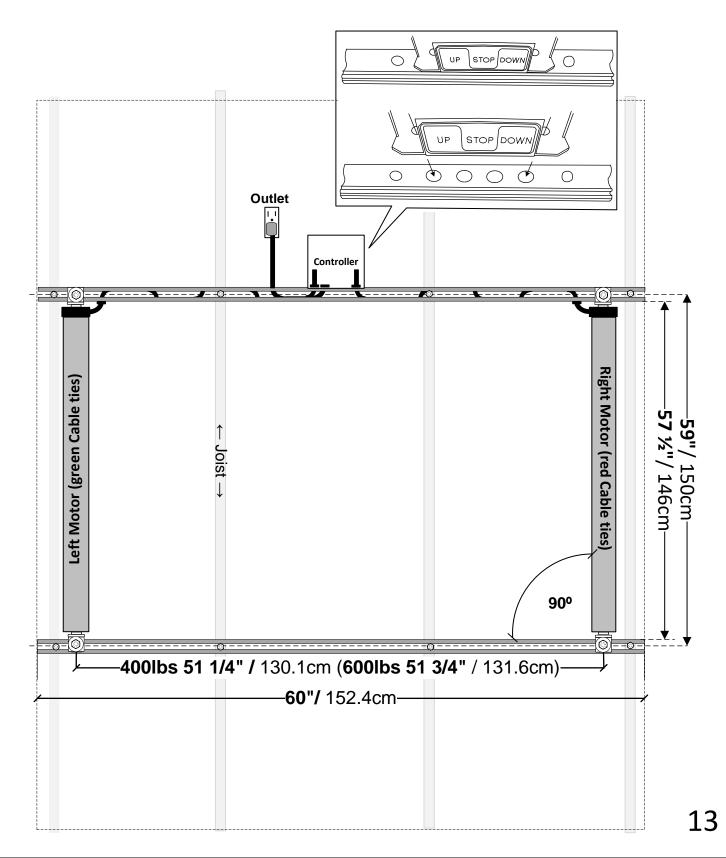


CONTROLLER MOUNTING OPTIONS

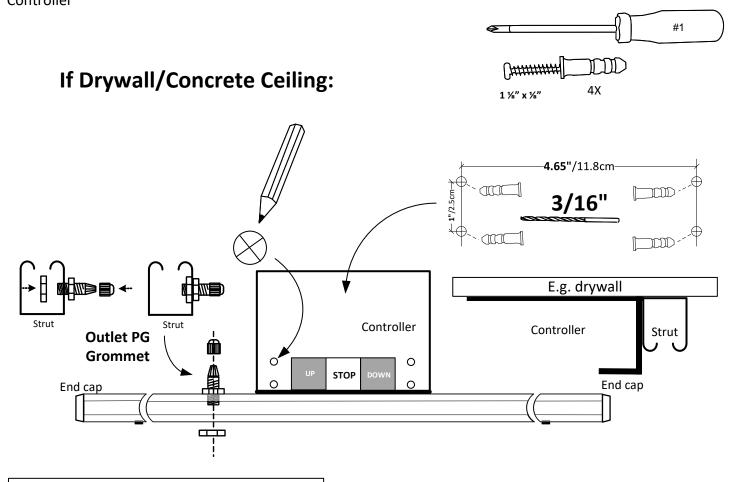



- Use anchors for dry wall/concrete ceilings
- For outlet, always use PG grommets!


If NO Drywall/Concrete Ceiling (open ceiling):

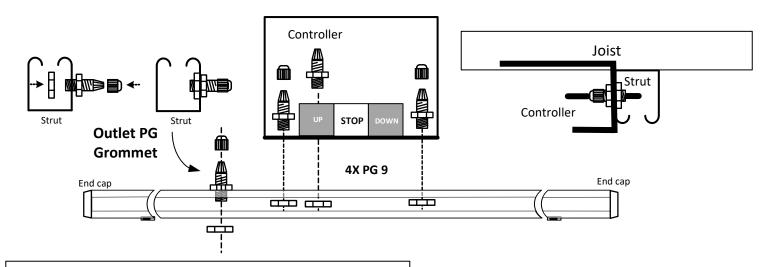



- PG grommets: If you have only joists, not e.g. drywall.
- For outlet, always use PG grommets!

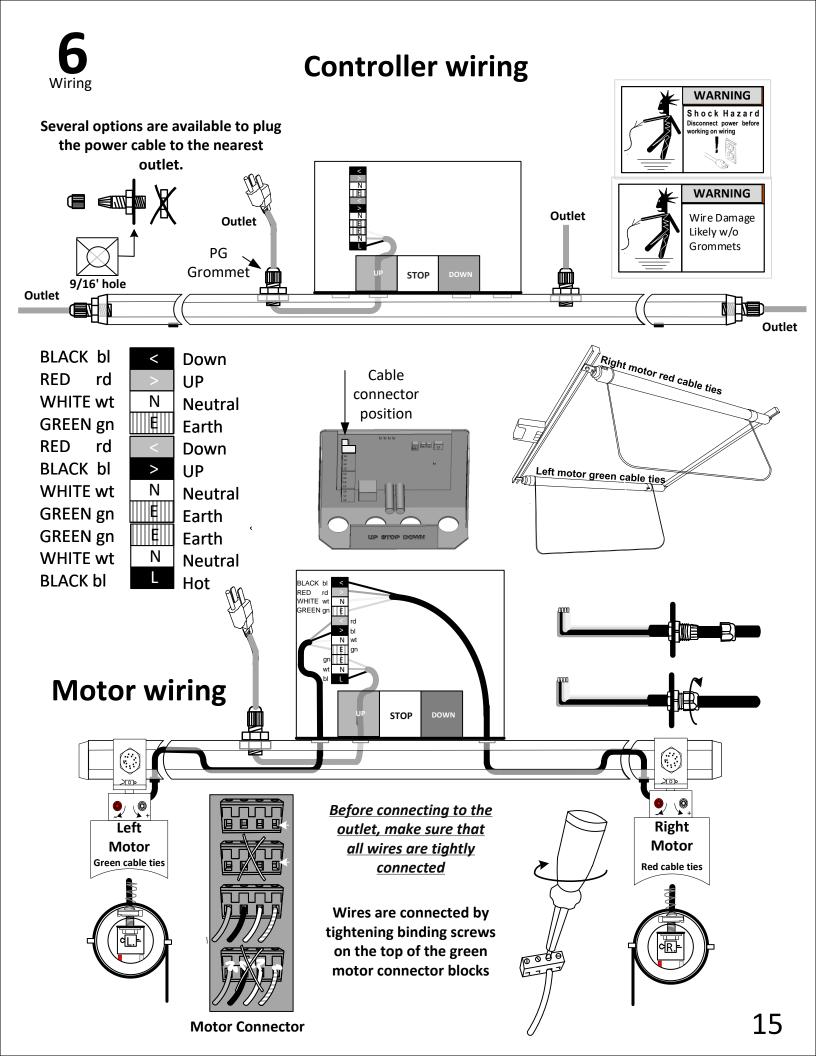

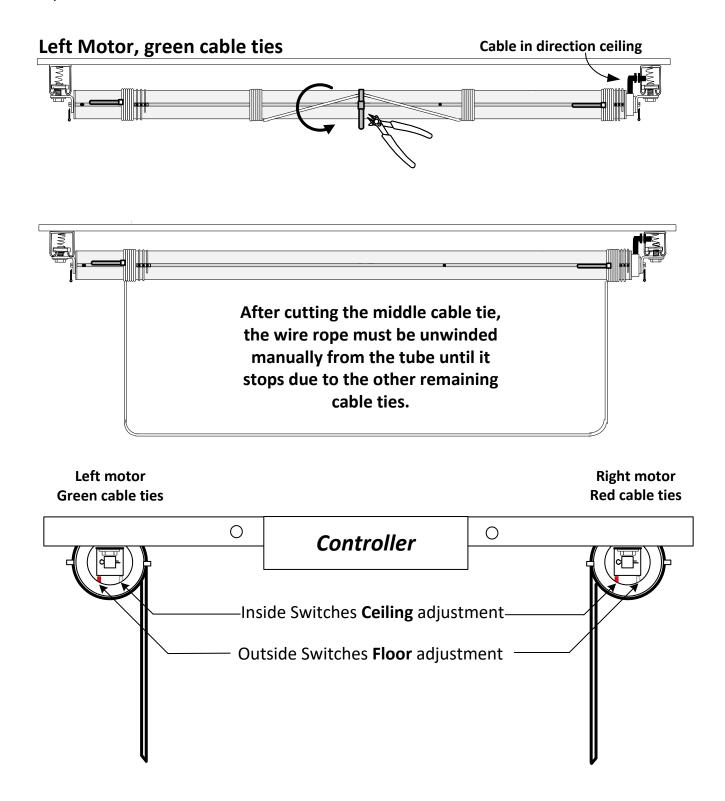

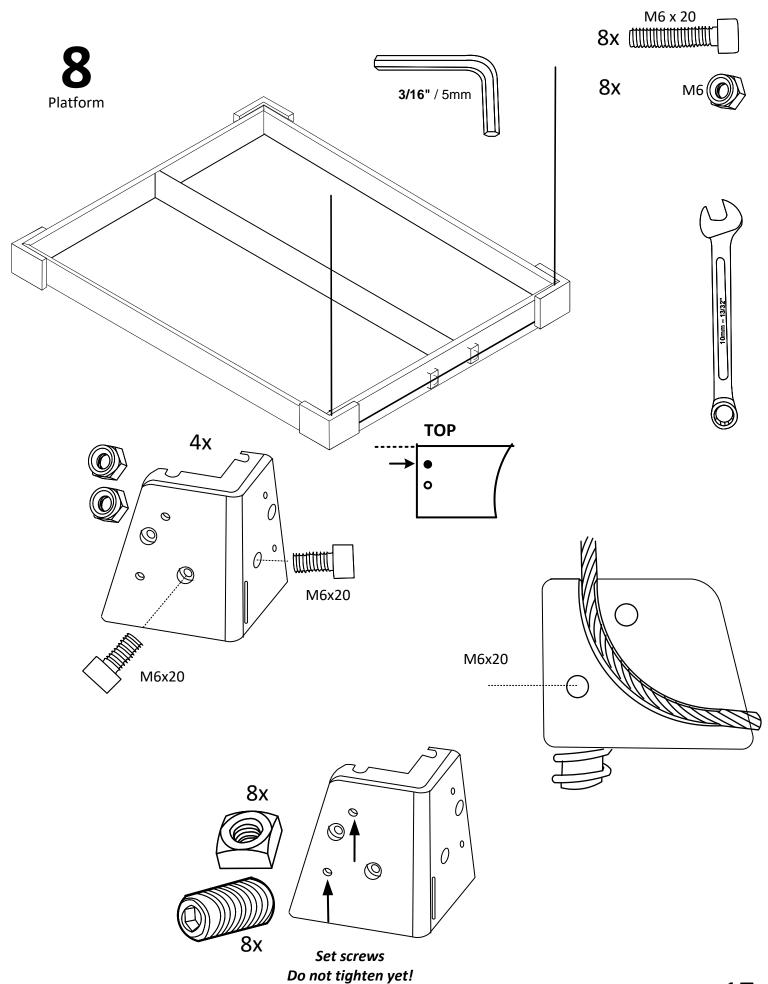


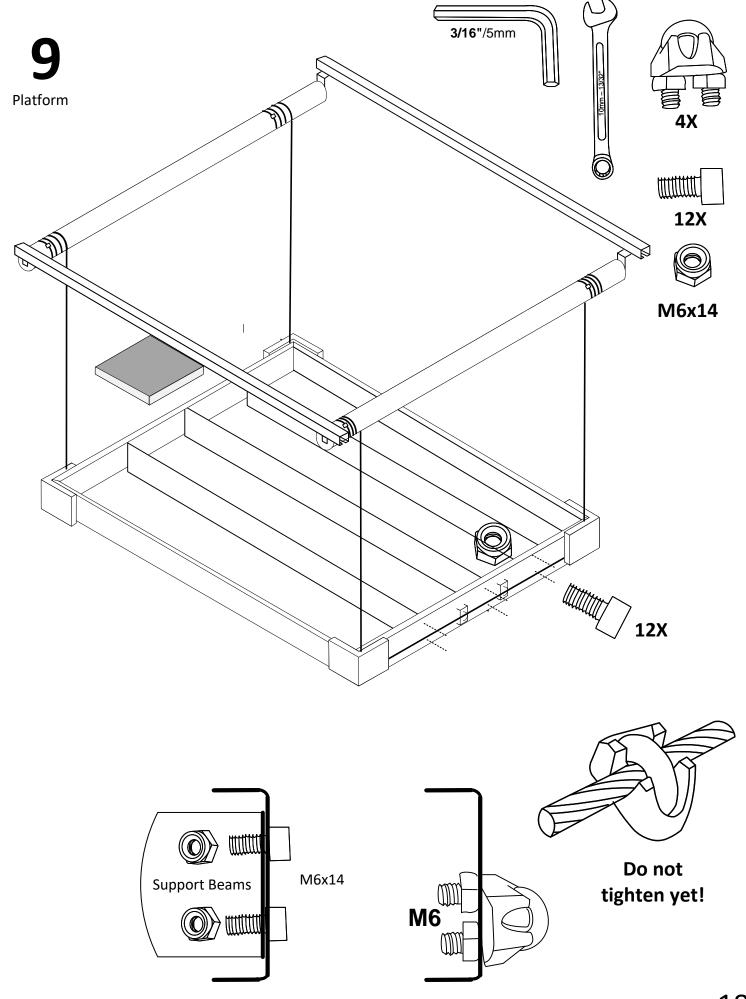

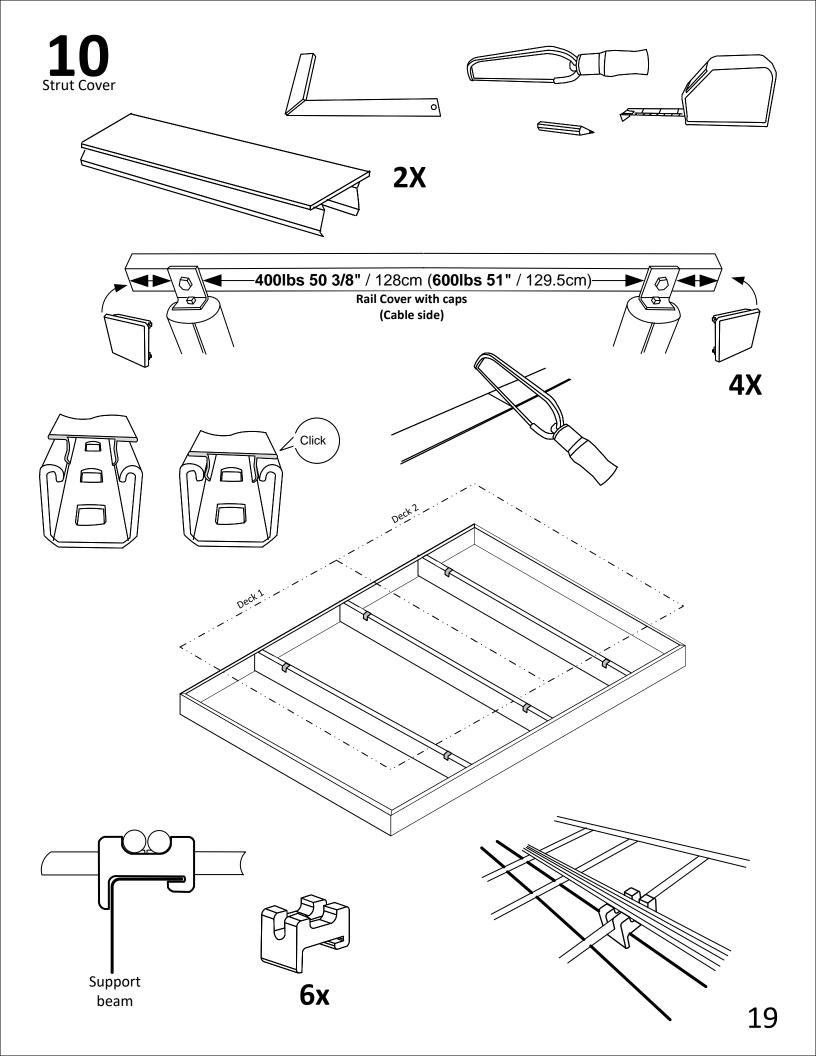

11 Inspection


Inspect and tighten all screws, wire clips, grommets and cotter pins. Make an mark on each part that might be able to shift over time (like the motor mounts) using a Sharpie pen to see the alignment hasn't changed. Inspect all items, especially movement on the alignment marks, once a year.

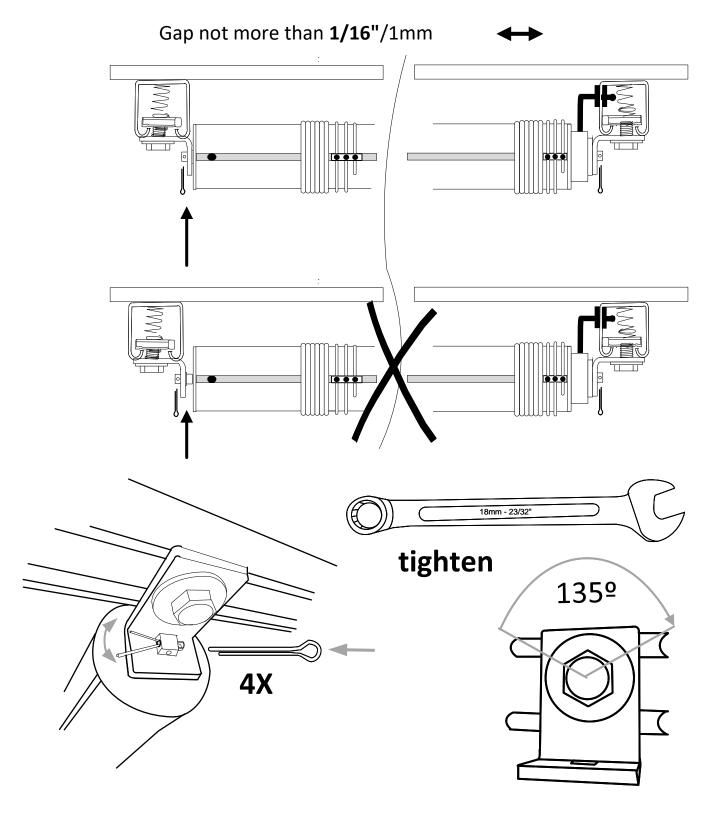

12 Check


Check list (after installing, and than ones the year!

- 1. Lag screws tighten 8X 2. Cotter Pins installed and curved up 4X 3. 12mm Bracket screws tighten 4X
- 4. All set screws tighten 24X 5. All 6mm screws tighten 28X 6. Wire clips tighten 8X
- 7. E-Wire in the right order installed 11X 8. E-Wire is not laying on sharp corners 9. Controller is switch on
- 10. All set screws tighten 8x

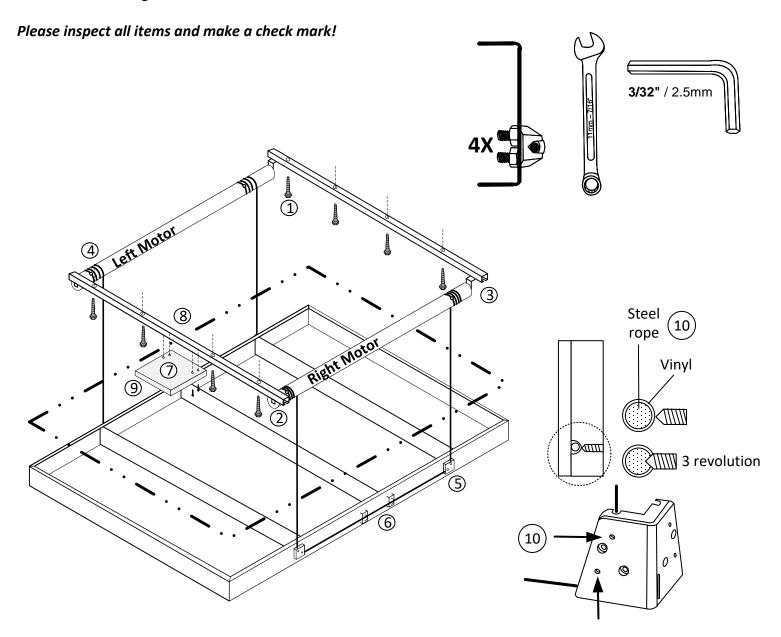


Important! The Lift has to run to the ceiling end points (stopped automatically) in order to be level itself properly.



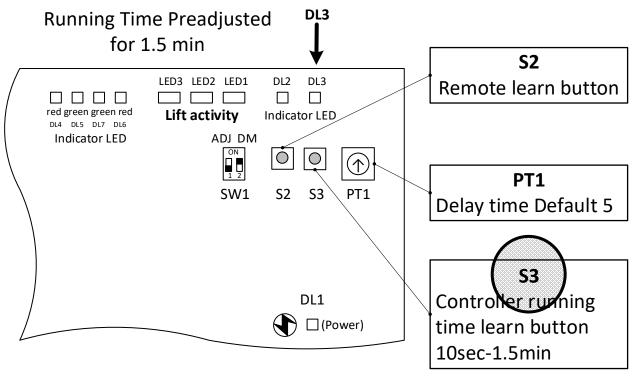

Switch on Controller	Indicator
Switch on the Controller, press power switch to the left	LED DL1 is lit
Programming the running time	Indicator
Press S3 run time button	LED DL3 starts to flash after 3 sec.
Hold S3 for 1:30min (max running time)	LED DL3 flashed and stopped release key
(You can program time between 10s and 1:30min) release key	e.g press S3, LED start to flash, hold for 30s, Running time is 30s now


Problems	Check
After switch on, LED DL1 is not lit	Is the plug connected to the outlet?
	Is the Outlet on a switch (and turned off)?
	Check the outlet works with an appliance
	Check the wire connection.
	Disconnect the Controller from the
	outlet and check the fuses.

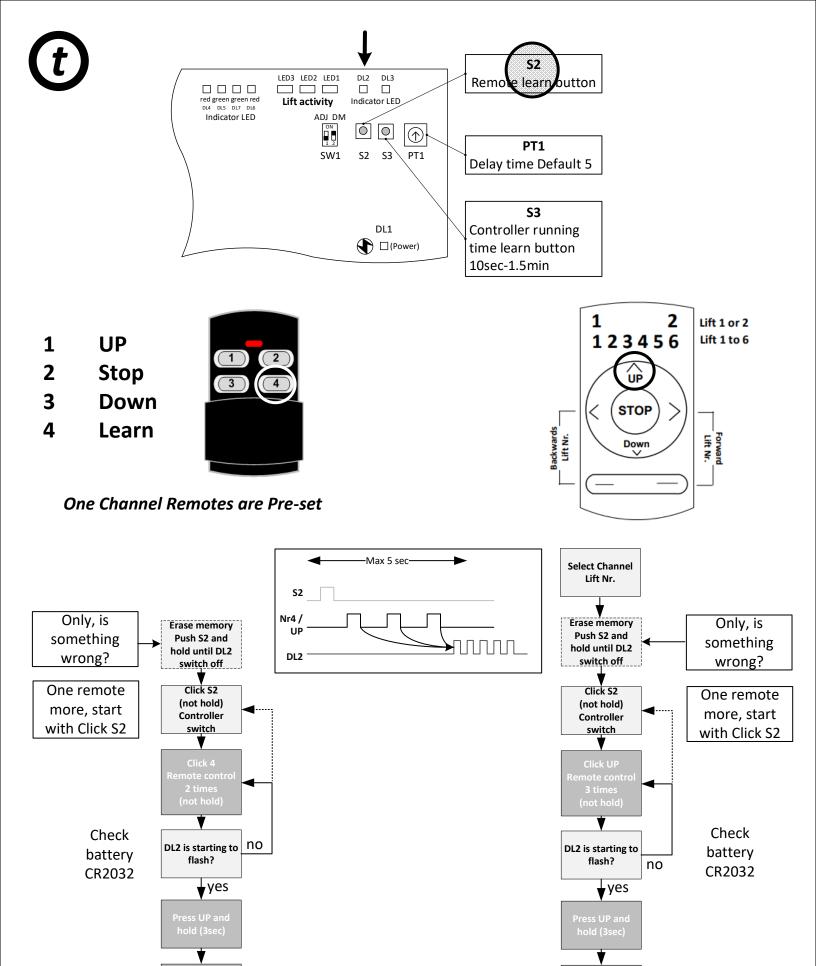



After the install, Please switch on the

DEADMAN

function

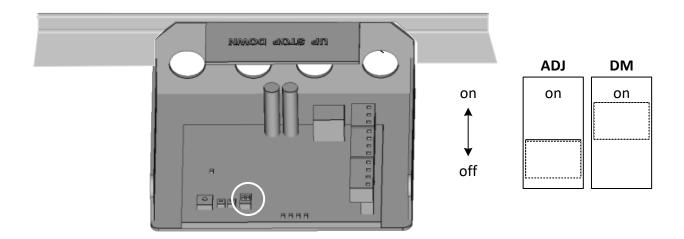

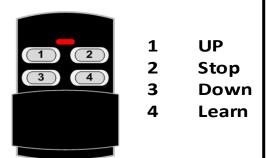

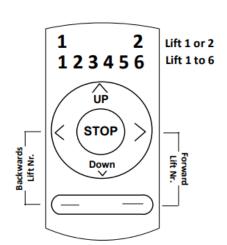

DEADMAN function is for your safety

You push the button 1 / ↑ (UP) or 3 / ↓ (DOWN) and hold it. The lift stopped immediately when you release the button on the remote control or the controller

You don't need to press the STOP button (2)

You don't need to press the STOP button (2 It is not working?

Please switch DEADMAN off and back on.

Is something in the way or in the surrounding area? The lift will stop immediately when you release the remote control button.

Please hold the button in direction Ceiling until both motors stop by themselves.

Automatic leveling of the platform.

During the motor adjustment is DEADMAN off 1 (UP), 3 (DOWN), 2 (STOP)