
# **AUXXLIFT Attic**

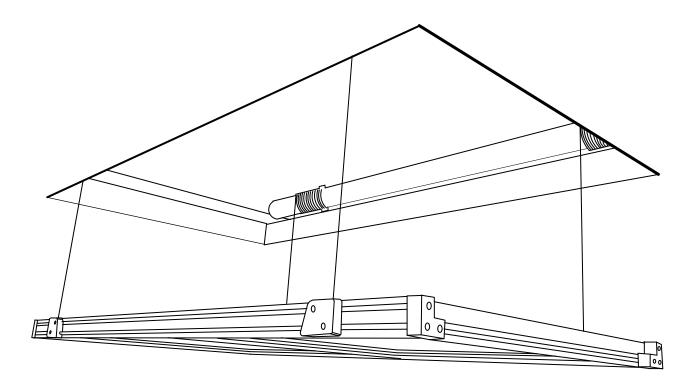



All rights reserved US Patent Release 09/2023/SW

### **Before YOU start**

Have you read through the instructions?
Do you have all the recommended tools?
Do you have somebody assisting you?
Have you allocated enough time?

For a professional it takes about 3 hours to install. What is most important is to follow the instructions and read everything carefully before you start.

5. You need a good, stable ladder.

6. Don't use an impact driver.

7. Clean the area before you start.

8. Wear safety glasses!

9. Keep work area clear!

Check measurements during construction.

Make sure that nothing is in the way e.g. windows, doors etc.

10. Does your garage ceiling have or has had termites?

11. Are the joists strong and big enough? (2" x 4" at least)

12. Mounting to a concrete ceiling requires anchors!

13. Has your home been built according to valid standards and guidelines?

14. If you have doubts about the ceiling construction, please ask a specialist!

If you have any problems understanding the instructions or you feel uncomfortable handling the installation, please ask a handyman or work with a contractor. Call/ write us if you need help or have concerns or questions.


www.auxx-lift.com/installation-help

easy

advanced


tough

difficult

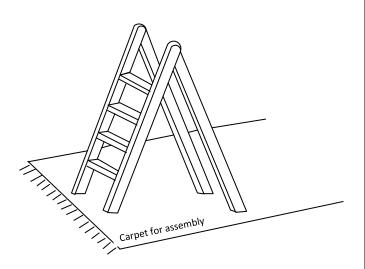





Help phone: PST 10 am -3 pm 1 805 862 8271

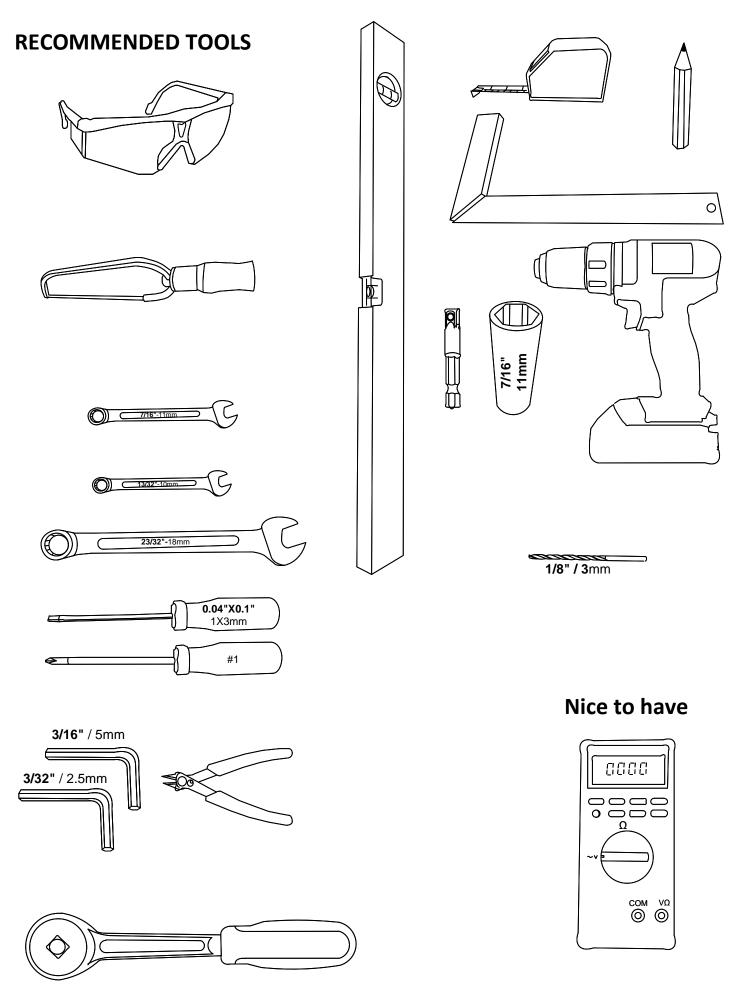



LIST OF PARTS \*Bold numbers are for 600lbs version

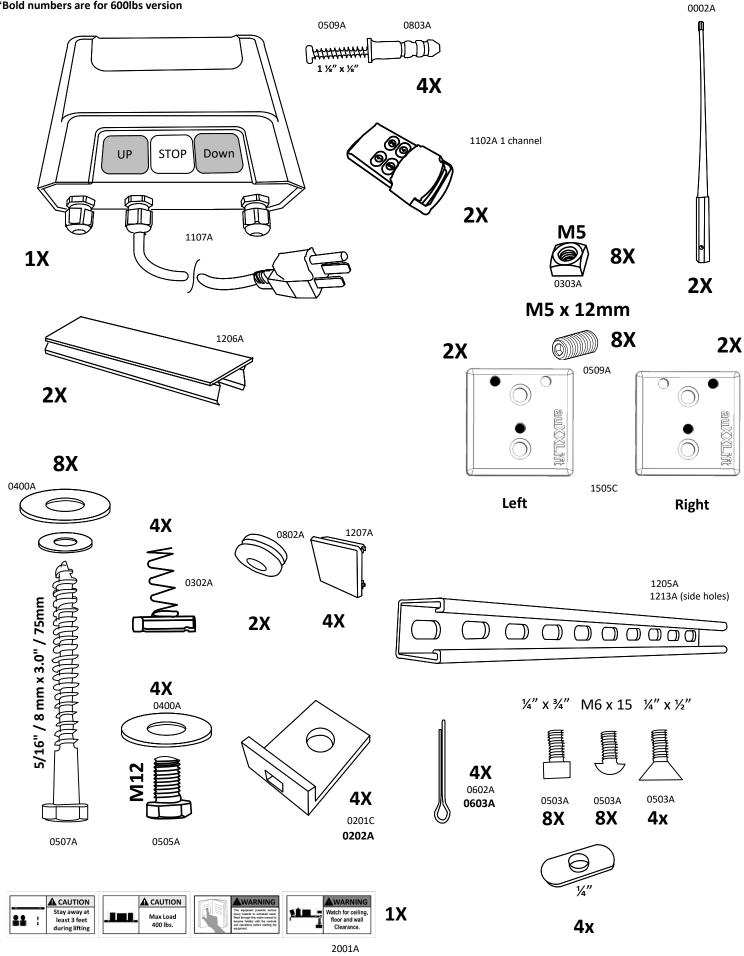



4

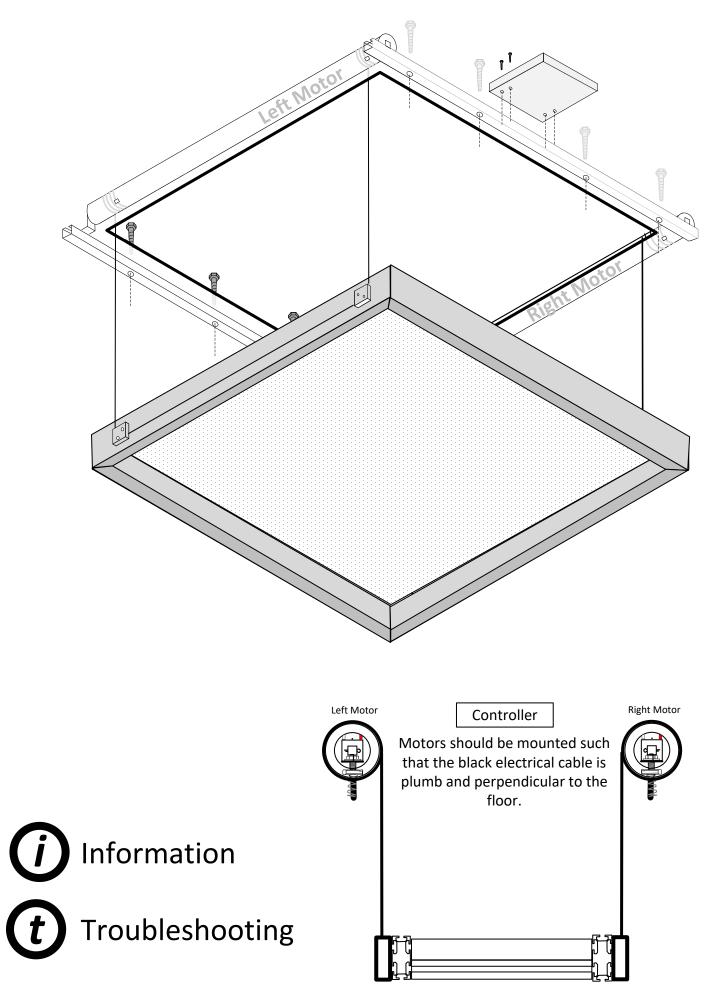


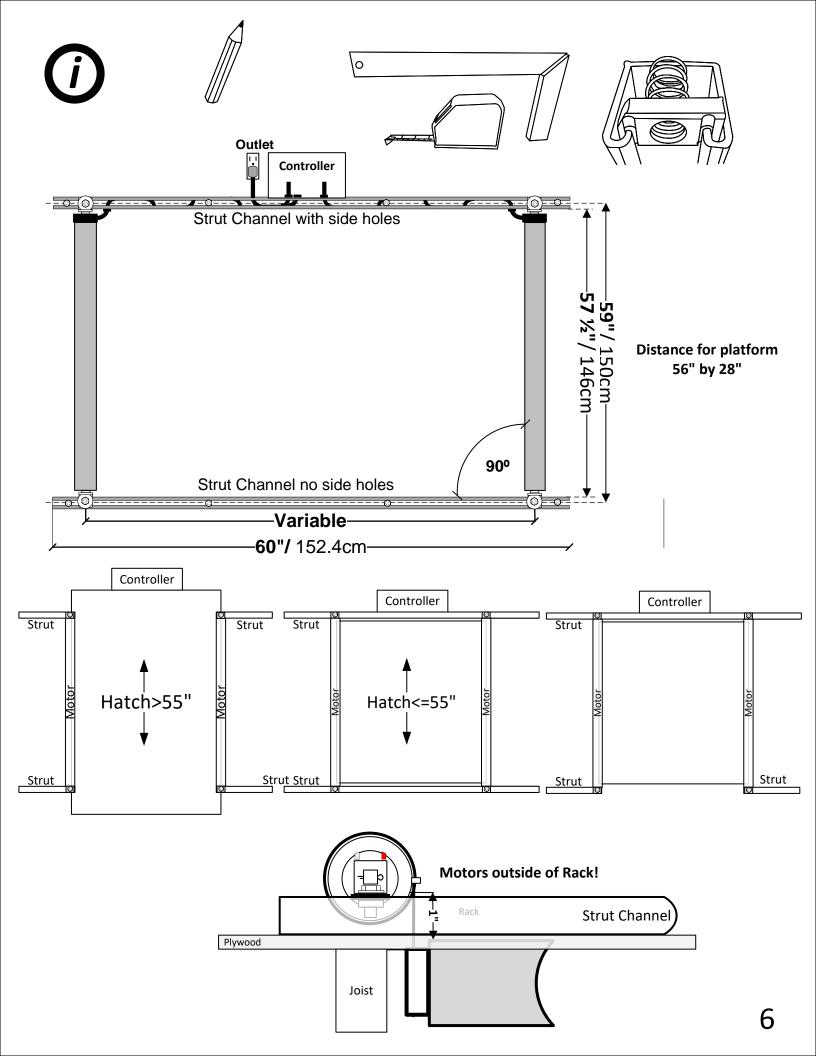


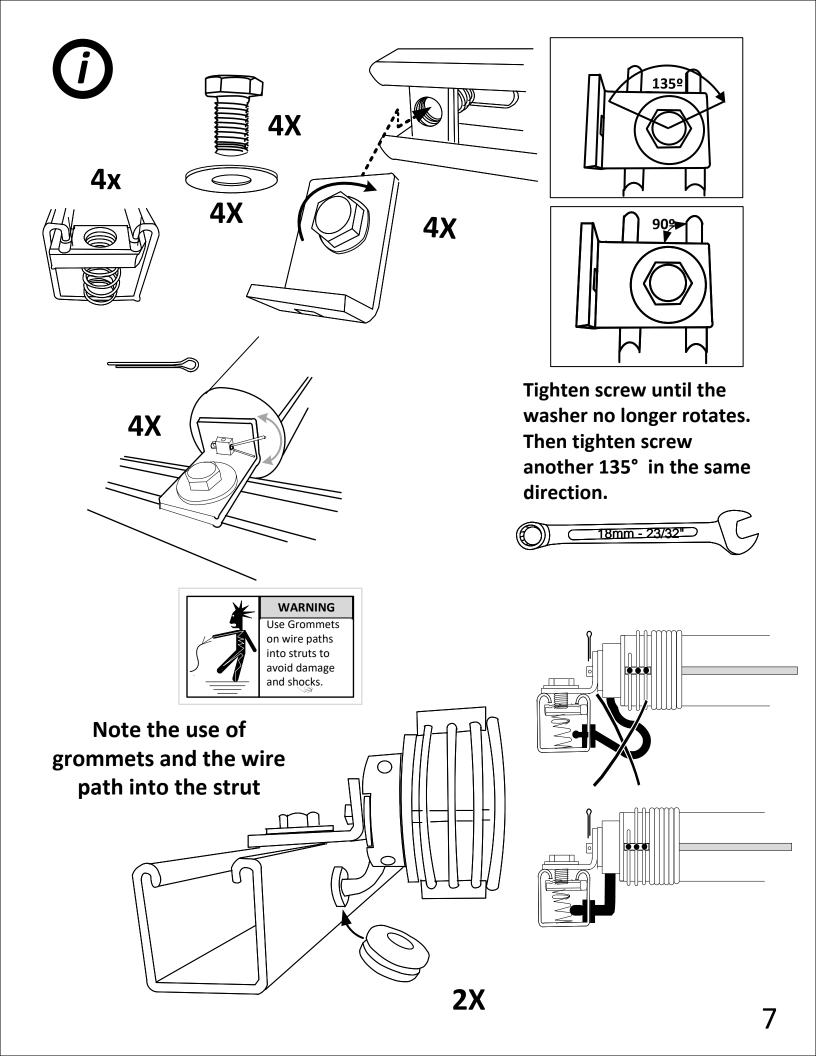

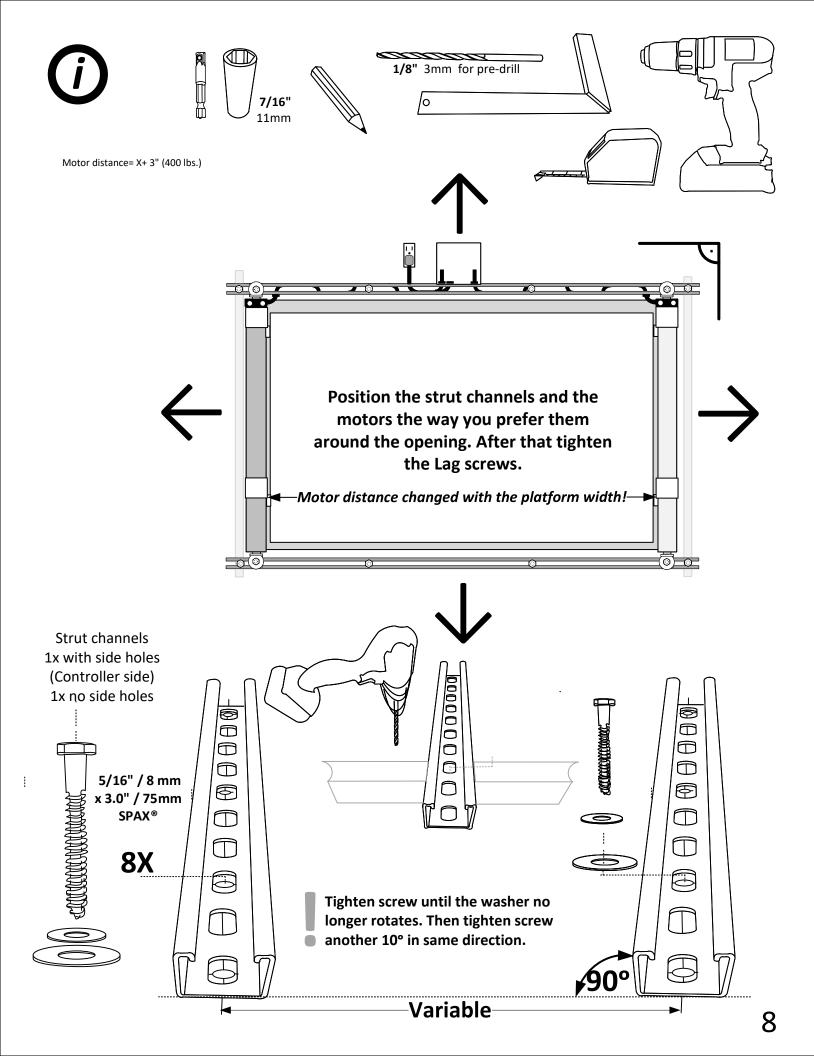

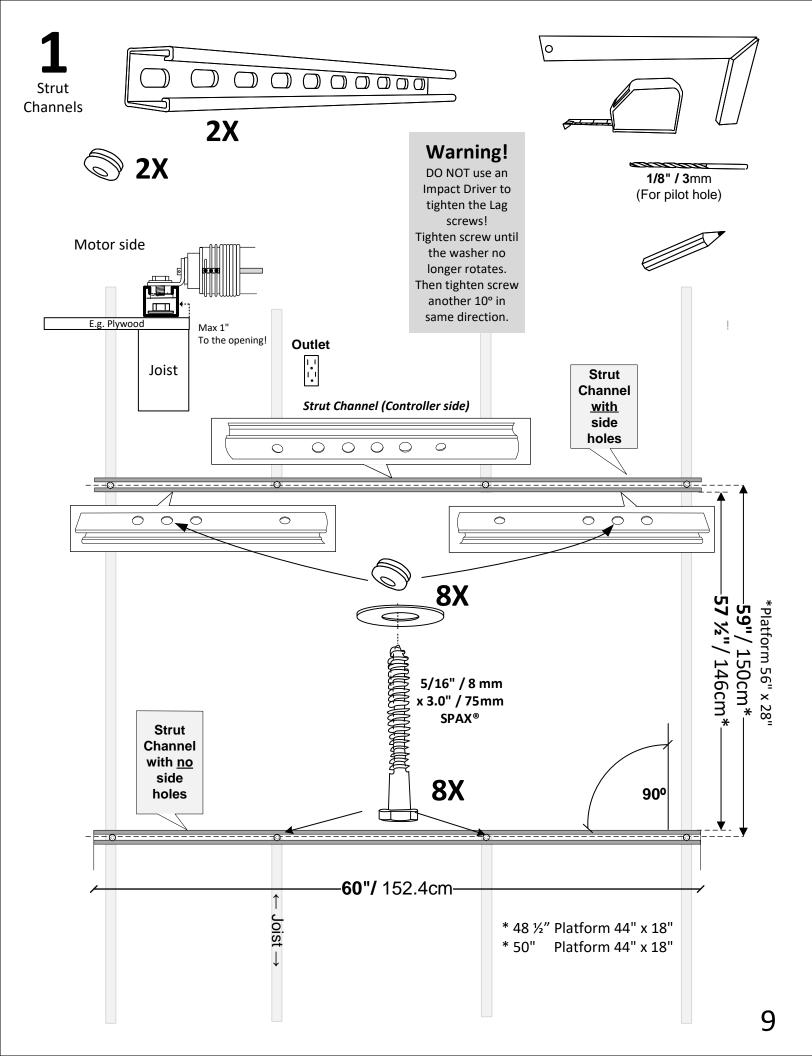


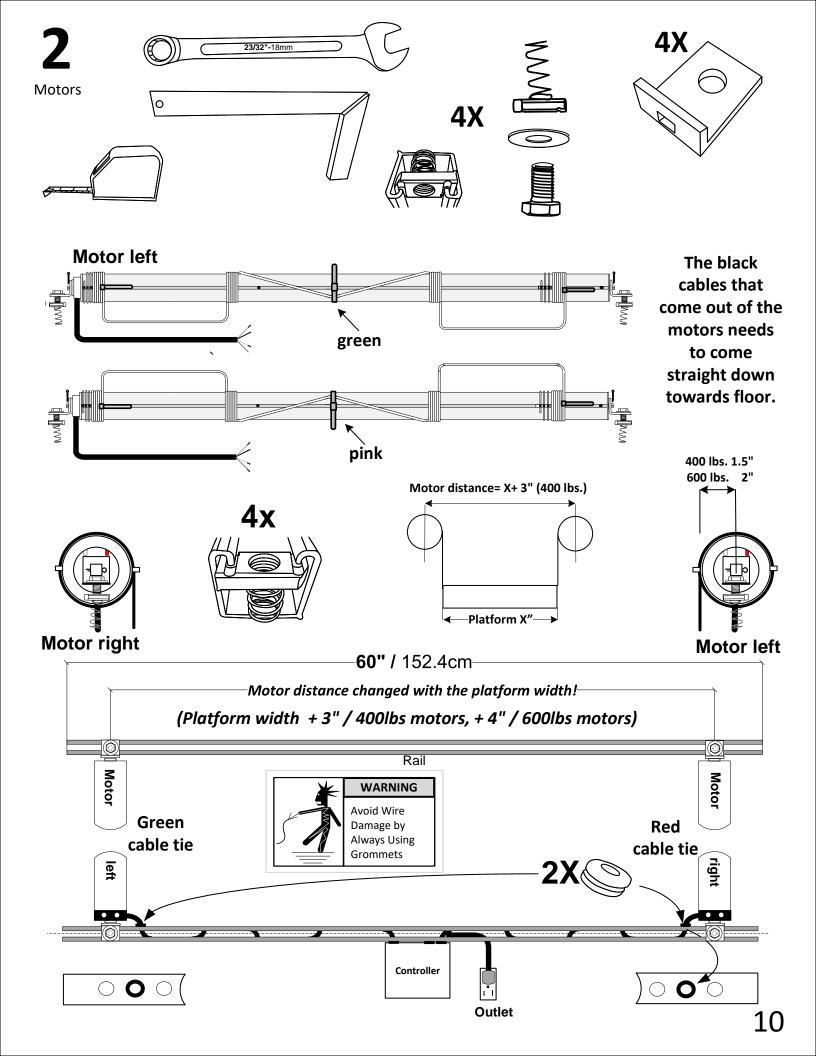

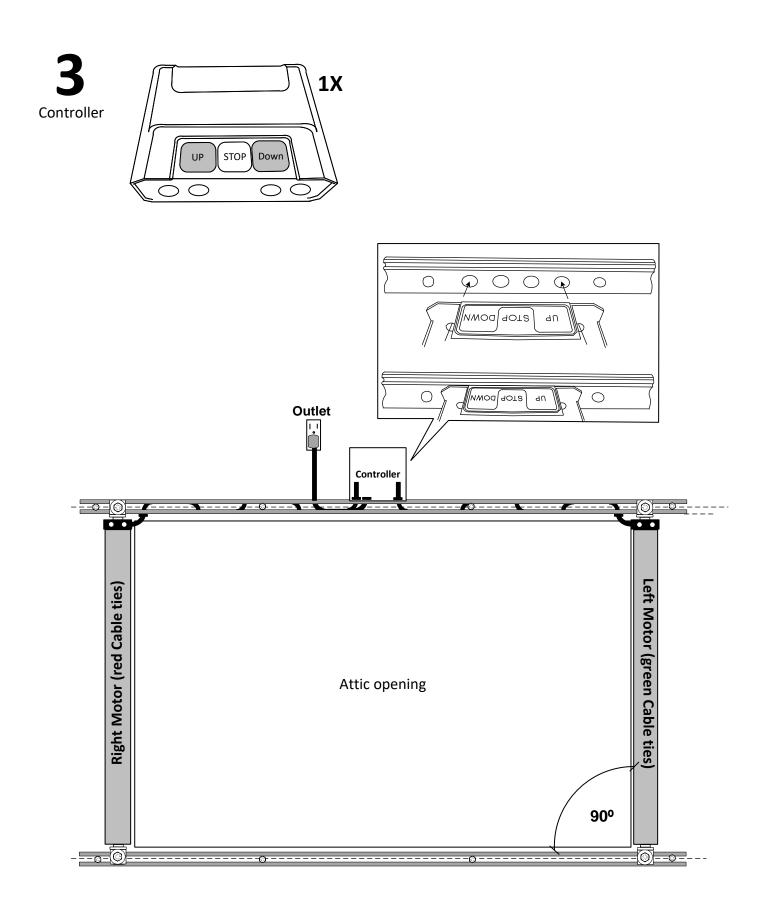






#### **CONTROLLER MOUNTING OPTIONS**

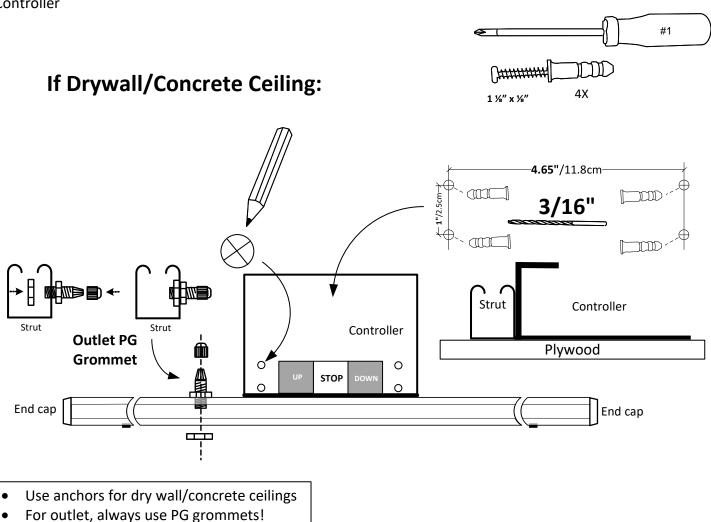


#### If NO Drywall/Concrete Ceiling (open ceiling):

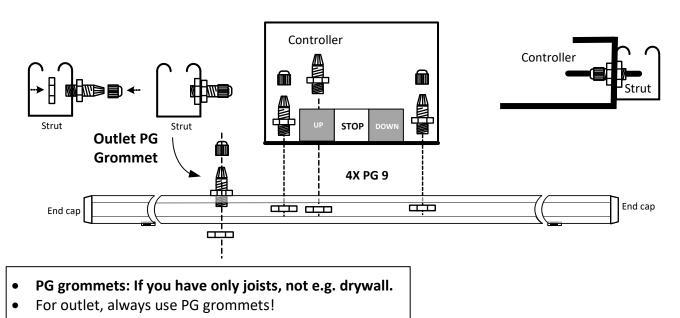


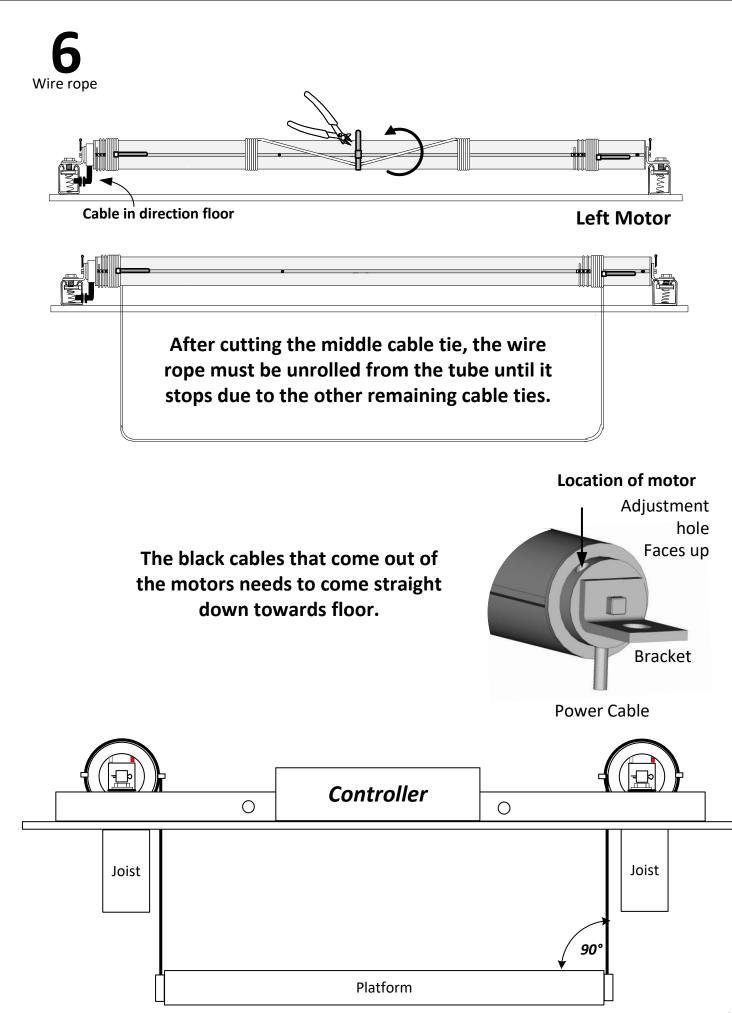

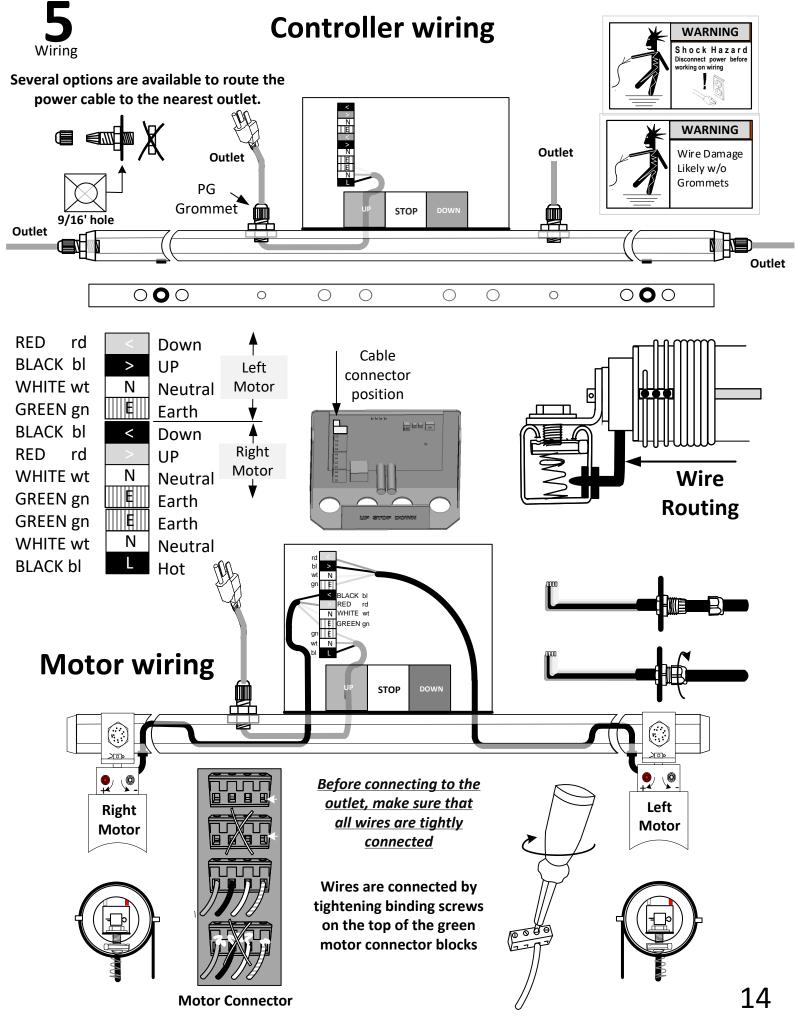


eft

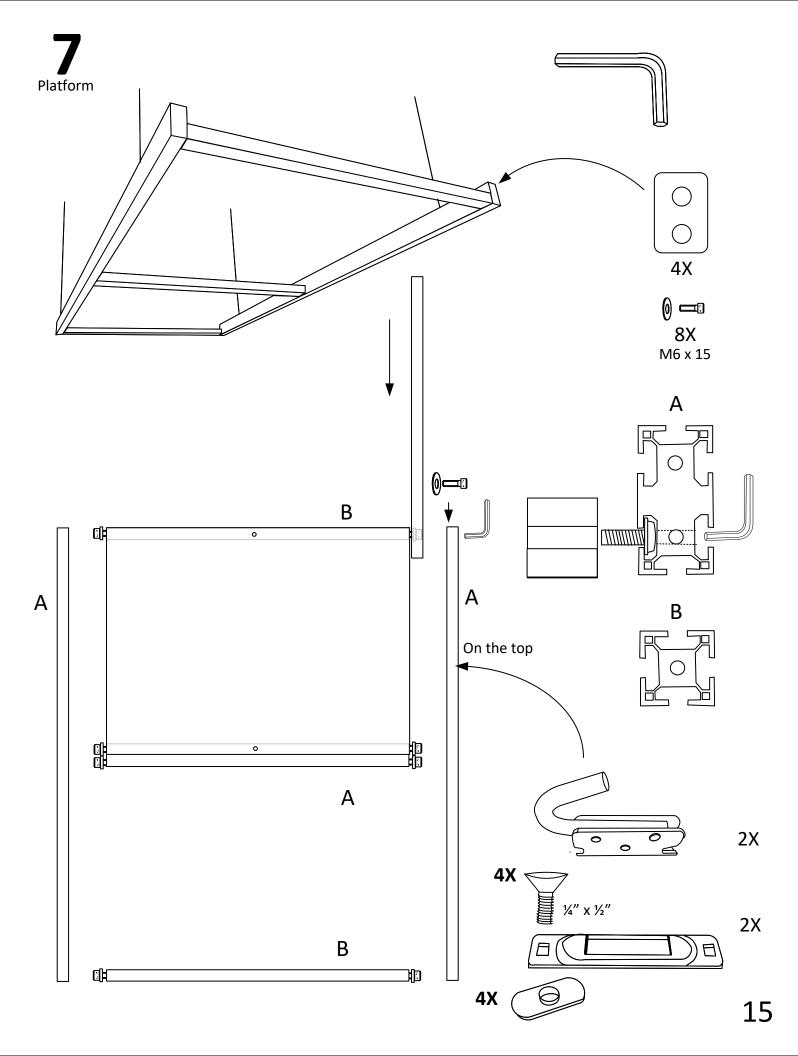


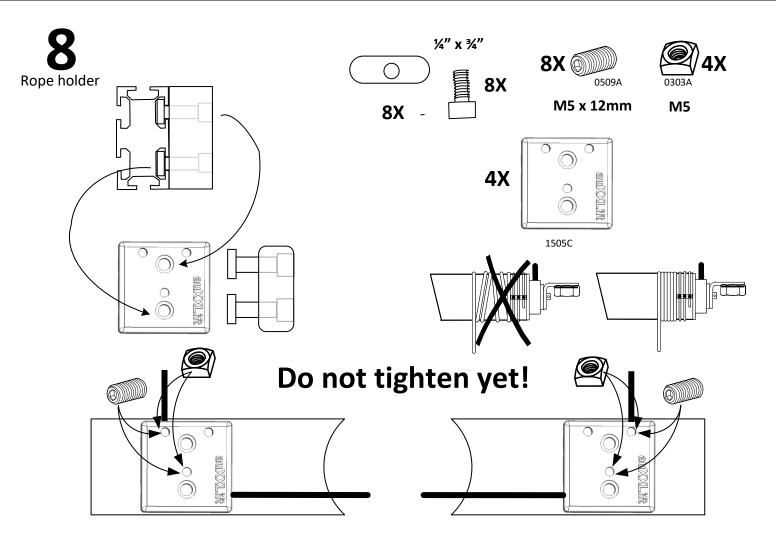

### Important: Platform adjustment to the opening!

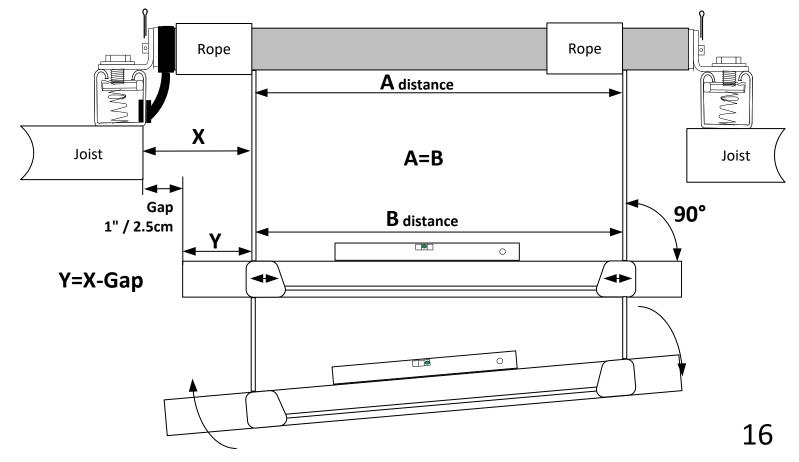



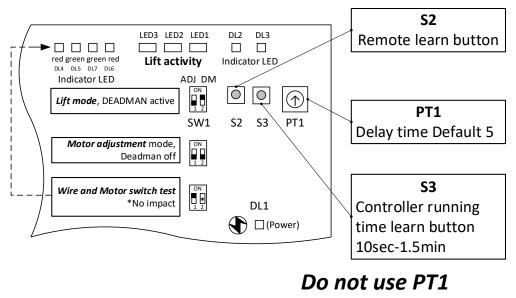


S2 and S3 for adjustment!



DeadMan off- press key (up/down) once and the lift runs. Press STOP 2 This function for adjustment only!


Most important! All switches work the same way, even though their labeling is different. Before you start to turn the stop (motor limit) switches, please be sure that you are turning them in the right direction!

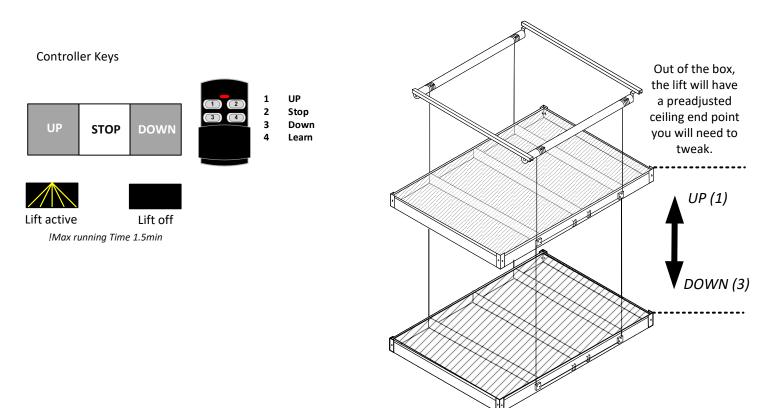


## **(**) Motor Adjustment (leveling), Preparation

#### Technical information for 400 lbs lift


Max travel is 1 tube rotation 1 tube rotation 1 turn on stop switch Smallest movement Movement Rack 14'\* Switch turns Travel speed 15.4 feet/ 4.70m & storage 12 turns on the stop switches 9" / 22cm 3/4"/ 2cm 1/16" / 1mm 4"/10cm 250 8'/min

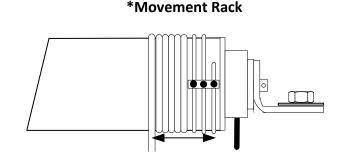


Only turn the switches by hand with the tool provided Stop turning immediately if you feel a mechanical click in the switch when turning.

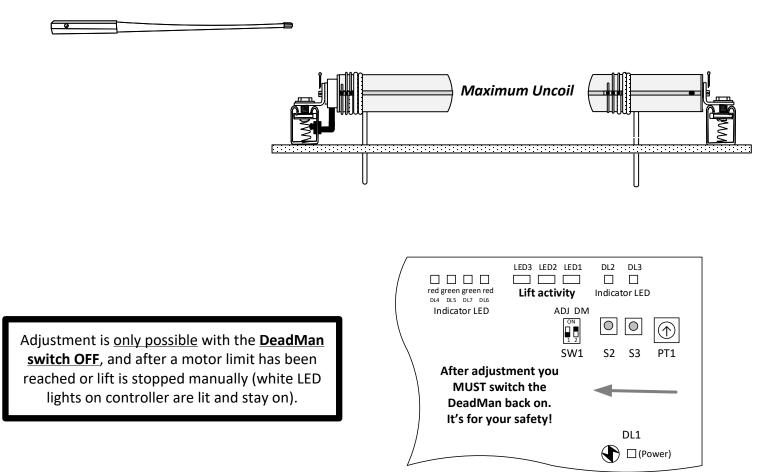

**DeadMan Function:** You use only the UP and DOWN buttons. You have to hold the button to make the lift move. When you release the button the equipment will stop immediately. If a key gets jammed you can stop the equipment with the stop button.

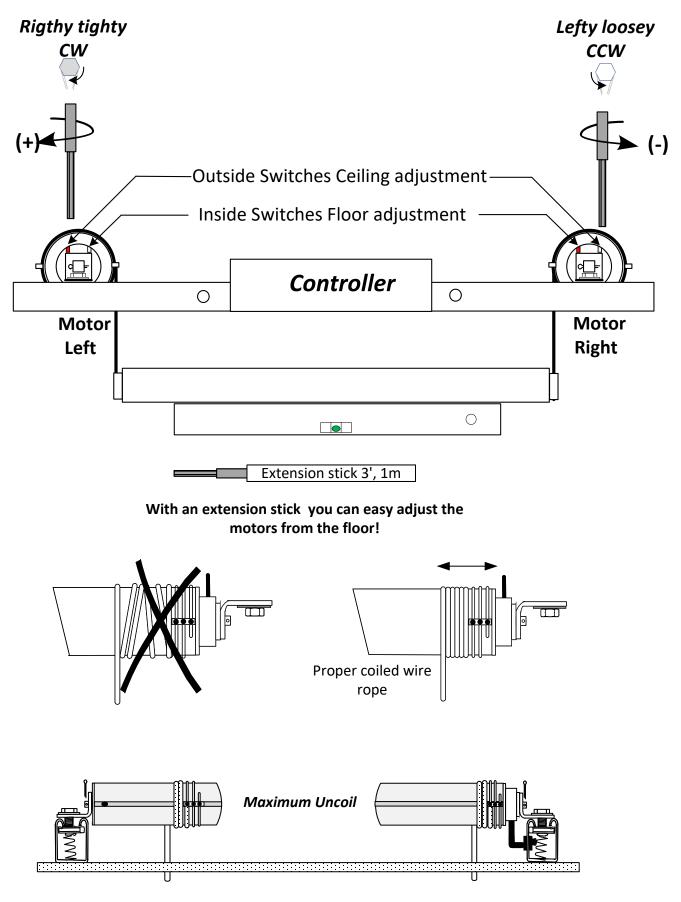



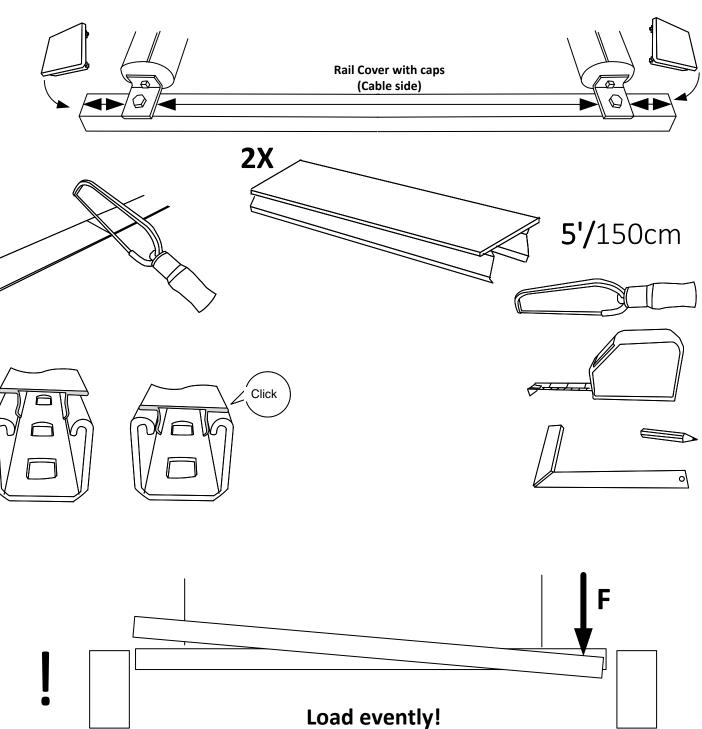



If you are done with the adjustment, please switch the DeadMan function back on Important! The Lift has to run to the ceiling end points (stopped automatically) in order to be leveled properly.

**4X** 

# Inspection


Inspect and tighten all screws, wire clips, grommets and cotter pins. Make an alignment mark on each part that might be able to shift over time (like the motor mounts) using a Sharpie pen. Inspect all items, especially movement on the alignment marks, once a year.

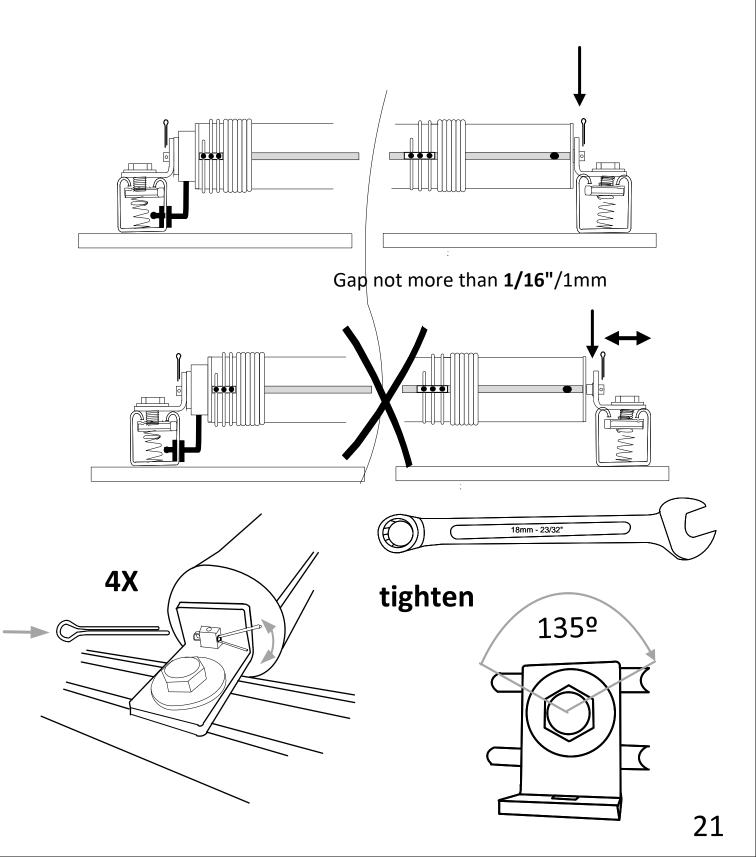

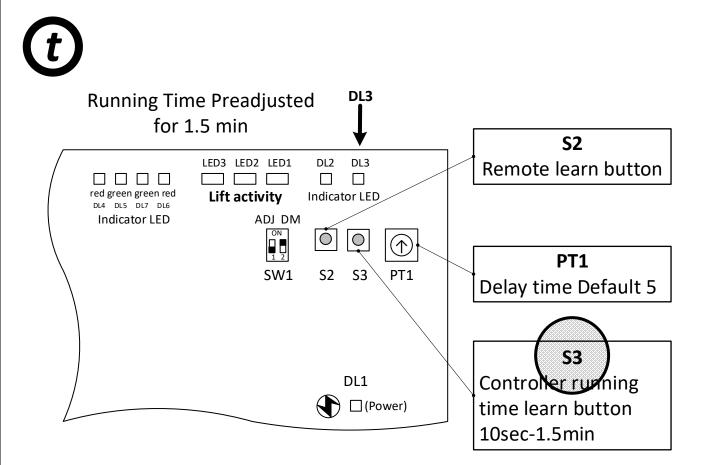



Switch on Controller	Indicator
Switch on the Controller, press power switch to the left	LED DL1 is lit
Programming the running time	Indicator
Press S3 run time button	LED DL3 starts to flash after 3 sec.
Hold S3 for 1:30min (max running time)	LED DL3 flashed and stopped release key
(You can program time between 10s and 1:30min) release key	e.g press S3, LED start to flash, hold for 30s, Running time is 30s now

Problems	Check
After switch on, LED DL1 is not lit	Is the plug connected to the outlet?
	Is the Outlet on a switch (and turned off)?
	Check the outlet works with an appliance.
	Check the wire connection.
	Disconnect the Controller from the
	outlet and check the fuses.

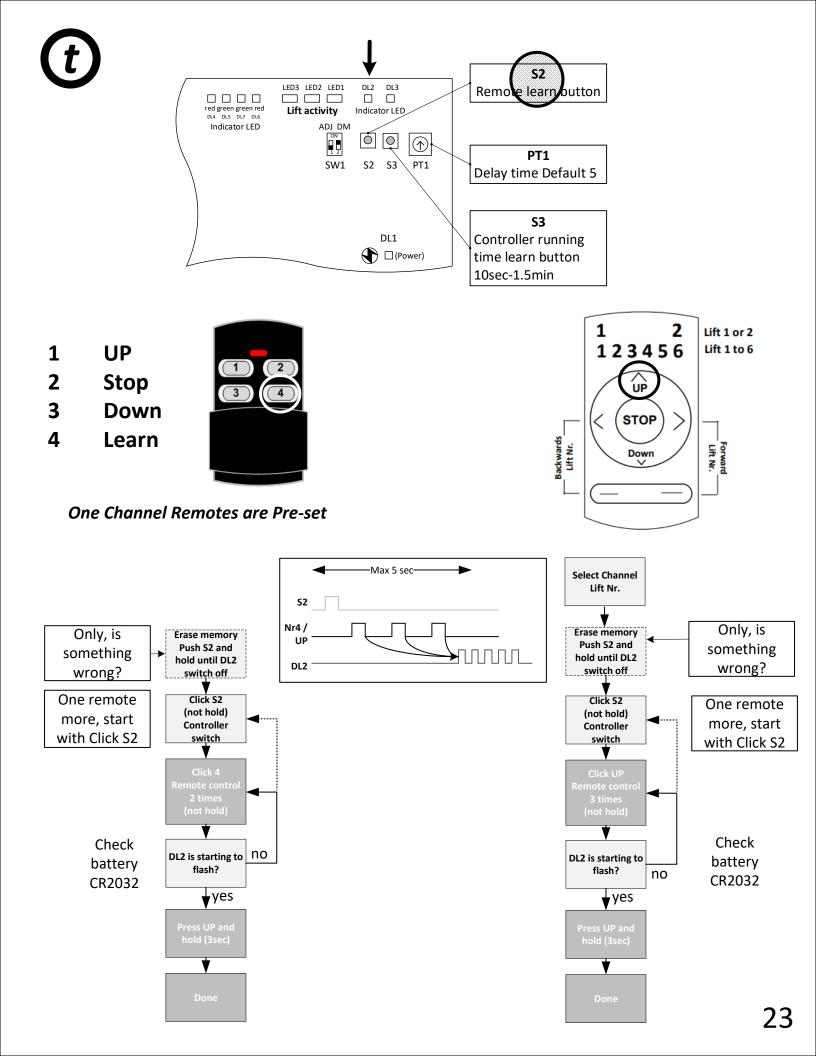



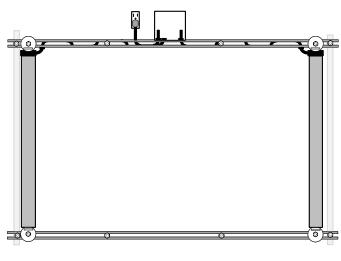

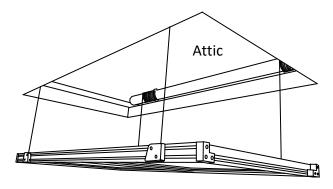

#### Projects in which the wire rope lose tension



Wire rope wound up



Maximum unwound Cable tie tightened around the last two turns



Even without tension the cable wraps are neatly side by side and no overlapping.

